


USER MANUAL

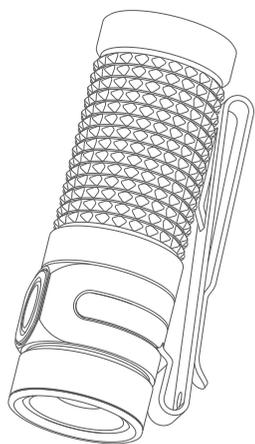

Baton 4

A rechargeable side-switch EDC flashlight with auto shut-off function and MCC charging.

IN THE BOX

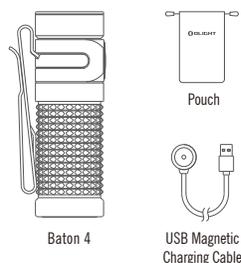


Table 1: SPECIFICATIONS

	COOL WHITE	CCT: 5700~7000K	CRI:70
TURBO	1,300 lumens	1.5min	23%
			75min
HIGH	300 lumens	70min	20%
			25min
MEDIUM	60 lumens	7h30min	
LOW	12 lumens	33h	
MOONLIGHT	0.5 lumens	30days	
	7,225cd	170m	1.5m
	IPXB	Rechargeable Li-ion Battery 650mAh 3.6V (2.34Wh)	Working temperature 0-40°C

(L)63*(D)21mm (L)2.48*(D)0.83in
52.5g/1.85oz (Including Battery)

* Above data are tested per ANSI/NEMA FL 1-2009 standard in Olight's labs for reference.

Table 2: USB Magnetic charging cable

Cable length	0.5m
Input	USB Type-A, DC 5V, 1A
Output	CC & CV, 4.2V, 1A
Charging time	About 1 hour

Figure 1 Remove the insulating film before use

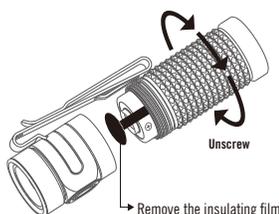


Figure 2 Charging

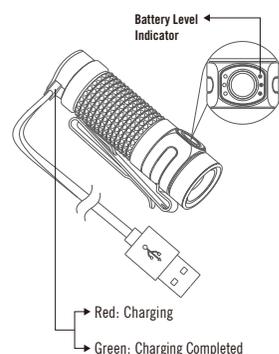


Figure 3 Turn On/Off the flashlight

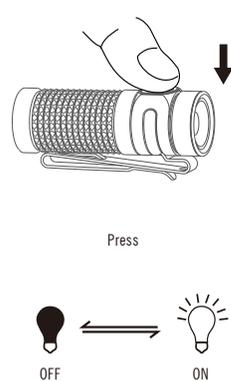


Figure 4 Lock/Unlock

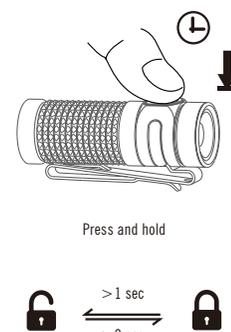


Figure 5 Moonlight mode

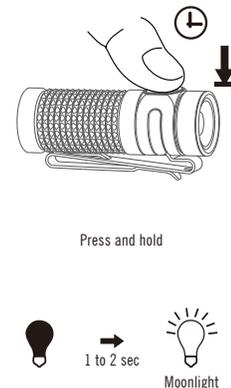


Figure 6 Turbo mode

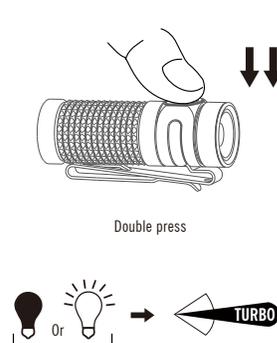


Figure 7 Strobe mode

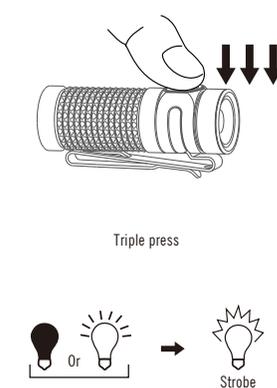


Figure 8 Adjusting brightness


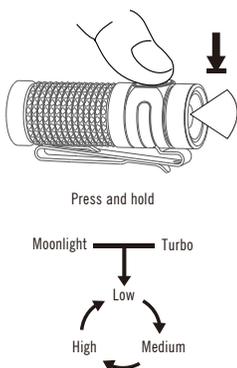


Figure 10-1 Brightness level indicator

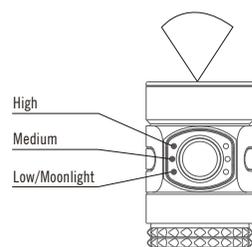

If the brightness level indicator fluctuates, it means that the current brightness level is at least 45% or higher.

Figure 9 Auto Shut-Off function


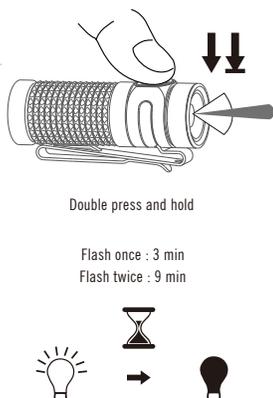


Figure 10-2 Battery level indicator

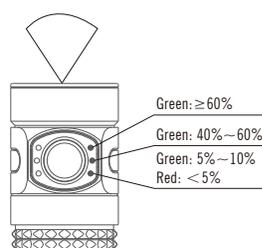

How to operate:

1. Product specifications, see Table 1 and Table 2.
2. Operating instructions as below:

2.1 Remove the insulating film before use, see Figure 1.

2.3 Charging, see Figure 2.

2.4 Turn On/Off the flashlight, see Figure 3.

Press the button to turn on/off the flashlight. When turned on, the flashlight will light up at the memorized brightness level. (Moonlight, Low, Medium, and High modes will be memorized when turned off. Turbo mode will be memorized as High mode; High mode output will last for 1 minute before switching to Medium mode; Strobe mode will not be memorized.)

2.5 Lock/Unlock, see Figure 4.

To lock the switch button, when the flashlight is off, press and hold the button (for about 2 seconds) until the Moonlight mode turns on and off. When the button is locked, press the button once to display the remaining battery level without turning on the flashlight. Press and hold the button for 1 second or more to unlock the button and activate Moonlight mode.

2.6 Moonlight mode, see Figure 5.

To activate Moonlight mode, press and hold the button for 1 second or more when the flashlight is off. If the last used mode was Moonlight mode, simply press the button.

2.7 Turbo mode, see Figure 6.

Quickly double-press the button to enter Turbo mode.

2.8 Strobe mode, see Figure 7.

Quickly press the button three times or more to enter Strobe mode. Press the button once or hold it down to exit Strobe mode.

2.9 Adjusting brightness, see Figure 8.

When the flashlight is on, press and hold the button. The flashlight will cycle through Low, Mid, and High modes, starting from the present brightness level. Release the button to select the desired brightness level. (Note: Moonlight mode and Turbo mode are not included in this cycle.)

2.10 Auto Shut-Off function, see Figure 9.

The flashlight can be set to automatically turn off after two preset periods: a long period (9 minutes) and a short period (3 minutes). To activate the Auto Shut-Off function, double-press and hold the button when the flashlight is on. After the function is turned on, the light will flash once to indicate that the short

period is set, and twice for the long period. To switch between timing periods, double-press and hold the button during a timing period. When reactivating the Auto Shut-Off function, the previous timing setting will be used.

3. Indicators instructions as below:

3.1 Brightness level indicator, see Figure 10-1.

3.2 Battery level indicator, see Figure 10-2.



WARNING

- Don't use damaged, deformed battery, or with broke sleeve.
- Do not short the charging port with metallic object intentionally.
- Keep the light locked out when carrying or transporting to prevent burning accidents caused by abnormal startup.

CAUTION

- Do not look directly at the light source or shine to eyes, may cause temporary blindness or permanent damage to the eyes.
- Do not block the light outlet at close range, the energy emitted from the light may cause the object to burn.
- Do not charge the light with any other non-specified chargers.
- Dedicated battery, do not take it out for charging.

NOTICE

- Baton 4 is not compatible with the Baton 3 Wireless Charger.
- Do not put a hot light into any type of fabric bag or fusible plastic container.
- Do not activate the maximum brightness mode multiple times continuously to prevent the high temperature on the surface.
- When the light gets hot, please switch it to low brightness mode, or shut off the flashlight temporarily.
- Active thermal management: The built-in thermistor monitors the temperature of the light in real time and suppresses overheating by reducing the output.
- Don't leave the light in a car where inside of temperature may be over 60°C, or similar places.
- Do not put it in the mouth or lick it, leakage of the charging port can cause discomfort.
- Non pet toys.
- Do not disassemble the product.

- Do not immerse the flashlight in seawater or other corrosive media as it will damage the product.
- For long-term storage, please remove the battery.

REMARK

- A USB adapter with 10W(5v2A) or above is recommended. Otherwise, the charging time will be longer.
- Keep the charging port clean and dry.
- Operating time in Turbo or High mode varies with ambient temperature and heat dissipation conditions, better heat dissipation longer runtime.

EXCLUSION CLAUSE

Olight is not liable for damages or injuries sustained resulting from the usage of the product inconsistent with the warnings in the manual, including but not limited to using the product inconsistent with the recommended lockout mode.

WARRANTY

Within 30 days of purchase: Contact the original seller for repair or replacement.

Within 5 years of purchase: Contact Olight for repair or replacement.

Battery warranty: Olight offers a one-year warranty for all rechargeable batteries.

USB magnetic charging cable: One year.

If you experience quality problems or damage with low-value fittings like lanyards or clips within 30 days of purchase under normal use conditions, please contact our after-sale service. For issues that occur after 30 days or for damage caused by abnormal use conditions, we provide a conditional quality assurance as appropriate.

USA Customer Support

cs@olightstore.com

Global Customer Support

contact@olightworld.com

Visit www.olightworld.com to see our complete product line of portable illumination tools.



Dongguan Olight E-Commerce Technology Co., Ltd.

4th Floor, Building 4, Kegou Industrial Park, No 6 Zhongnan Road, Changan Town, Dongguan City, Guangdong, China.

Made in China



CAN ICES-005 (B) / NMB-005 (B)

3.4000.0638 A. 06, 28, 2023