

S80 BATON



LED Flashlight

S80 Baton maintains. O light S series's simple, reliable and easy of use advantages. A customized: 4000mAh 28650 lithium rechargeable battery inside, integrated charge port, output up to 750lumens. It is a preferred flashlight for household illumination, outdoor and industry field application.

Supplied Accessories





Operation Instrution Momentary On: Unc

Charge:

at moment that the button switch is pressed and turns off when the button switch is released.

Turn ON/OFF:
Press then release the button switch within I second. Every restart, output brightness keeps same as previous memorized brightness.

Under off status, press the button switch and hold 1 second or above, the light turns on

■ Change Mode: While on, pross and hold the button switch, output will change by the order *Low-Medium-High*, releasing the button switch will froze the output at presented brightness.

Strobe: Quickly press the button switch twice (if initial status is off, triply press), Under strobe status, pressing then releasing the button switch whin 1 second will turn off the output, if the hold time over 1 second, the light restores to memorized brightness.

Lock Button Switch: While on, hold the button switch will the light recome soft. Usually the output will

status, the hidden lamp under the button switch will turn on 1 second while the button switch is unspeciedly pressed, but the light will not turn on 1.

Unlock: Triply slick the button switch within 1 second or reinstall after taking out the battery.

 
Connect the charger to AC power source or wall socket, then discover the soft-cover and insert DC plug of charger into the charge port. The indication of the charger displays the charge status. See below:

Red -- charging in progress; Green — completed or not connected.

When charge completed, please take off the charger from AC power source or wall socket, and bull out the DC plue, insert the soft-cover into his seat.

experience three loops of "Low-Medium-High" before entering into off: Under lock

Warning Don't always connect the charge with AC power source after charge completed, it may cause to fire. Don't long time connect DC plug together with the flashlight while no charge. ■ Replacing Battery: Please using the factory supplied battery, Firstly, counterclockwise unscrew and take out the fall cap, then take out the battery and insert the fresh battery, the positive of battery should towards the head of the flashfight, Refer to below fugure.



Specification

Characteristics	Specification
Material	6N01-T6 AL, Class-III harden anodization treating
Bezel	Stainless Steel
Size	Head D39.6mm / Body D32.5mm / Total Length 154mm
Weight	277g (with battery)
Color	Black
Reflector	Orange peel, aluminum machining
Switch	Side button switch
Lens	Hardened glass, double sides AR coating, single side anti-water coating

LED	Cree XM-L LED
Battery	Customized 4000mAh 26650 lithium rechargeable battery
Flux / Runtime	10 lm / 80h; 180 lm / 8h; 750 lm / 2h
Special Mode	Strobe 10hz, 750lm
Peak beam intensity	16650cd
Max Beam Distance	260meters
Impact Strength	2 meters dropping, 6 directions, twice each,
Waterproof	IPX8
Low Battery Prompt / LVSD	When battery voltage drops to 3,15 \pm 0.05V, the lamp under the button switch will flash twice per 3 seconds interval, and the output will automatically jump to lower brightness level. If the flash light is running a low brightness level, MCU will shut off the power supply.
Charger	Input: 100 to 240 VAC, Output: CC/CV 1A , 4.2V
Charging time	About 5 hours
Active thermal management (ATM)	When internal MCU detects the inner temperature over 85°C, within next
	10 minutes, it will make regular and controls the output smoothly drop
	to 60% of maximum brightness, then staying at this brightness level
Key-ring Hole	Locating at fixing screw of soft-cover in the tail cap

SBO Baton于电筒保持Olight S 系列简洁,坚固,易用等优异特征。它内置定制4000毫安时 26650可充锂电,并具有杂电接口,手电输出达到750运输。 SBO是家用照明,户外及工业领域应用的省选产品。

職机配件

 








用户手册 (本手册) 充电器



- 1 发光二极管 2 透镜
- 3 不锈钢攻击头 4 开关按键
- 5 简身
- 6 尾盖 7 软寒固定螺钉
- /钥匙环固定孔
- 9 充电接口软塞

- 即时点亮,关机状态下, 按下开关按键并保持1秒或以上, 按下时开,释放时关 。
- 开、关机,按下开关按键并在1秒内释放。每次开机,手电输出在前次关机时记忆的亮度级。■ 改变模式,开机状态下,按住开关按键并保持,手电输出亮度在"低-中-高"之间循环。释放按键
- 特选定当前的亮度。■暴闪模式: 快速连按开关按键二次(初始状态为关署按三次)。在暴闪状态下,按下开关,1秒内票数, 绘出关键,如据出1秒,绘出记忆的亮度。
- ■锁按键: 开机状态下,按下开关按键并保持,输出经历"任-中-高"领环三次后自动关闭, 手电进入锁定状态;在锁定状态,如开关按键被意外按下,手电不会开机,开关按键
- 处的灯将点亮1秒。 ■ 編 編 ・ 在衛定状态、偏快速连击按键三次螺锁并开机。看新装入电池也会自动螺锁。
- 所 明: 在明正水心が、南沢巡池田攻戦ニベル等明光ア10. 皇朝東へ10元池安日初帰戦。 ■ 充 电、 连接充电器到电源指板或端壁指孔,揭开手电尾端充电接口软塞,将充电器DC括头指 入。充电状态指示灯位于充电器。指示灯显示状态。
 - 八。元电小心指示为正丁元电影。指示为显示小心: 红色 -- 东电进行中: 绿色 -- 东电完成或未连接手电。
 - 充电完成后,将充电器从电源插板或墙壁插孔取下,请拔出DC插头,并塞聚充电接口款塞。
 - 普告 充电完成后,请及时新开电源,勿将充电器长时间连接到市电;不充电时,请勿将手电连接到充电器。
- ■更换电池: 请使用厂家提供的电池。 先进时针方向旋开手电尾盖, 将电池取出后, 将入新电池: 电池正报期向手电前端差入, 然后被紧肩着。见以下电池模传标识图,



規格		
特征	規 格	
主体材料	6N01-T6 铝材,表面三级硬质阳极氧化	
攻击头材料	不锈钢	
体 积	头部直径 39.6毫米/ 简身直径 32.5毫米/ 总长度 154毫米	
里 章	277克 (包含电池)	
頗 色	黑色	
反光杯	铝构造,橘皮反射面	
开 关	侧按键,轻触开关+硅胶帽	
透 镜	铜化加硬玻璃,双面镀增透膜,单面防水膜	
发光二极管	Cree XM-L	
电 池	定制4000毫安时 26650可充钽电池	
输出亮度级/运行时间	10流明 / 80小时; 180流明 / 8小时; 750流明 / 2小时	

峰值光强	16650 坎德拉
最大射程	260 米
抗冲击	2米跌落,6个方向,每个方向2次
防水	IPX8
低电压提示/低压关机	电压低于3.15±0.05伏时, 开关键键底部指示灯以间隔3秒闪两次的速度闪动
	同时亮度自动至低一级的档。最低亮度档低于3.15±0.05伏时关斯电源供应
充电器	输入电压:交流 100~240伏 50/60赫兹;输出: 恒流恒压 1安掊 4.2伏
充电时间	約5小时
主动热管理	采用热敏电阻测试内部温度,当内部温度达到约85度时,在10分钟内,
	输出平滑下降到最大亮度的60% 然后稳定在这个亮度
钥匙环孔	位于尾盖底部软塞固定螺钉

暴闪,10赫兹

特殊模式



Olight Technology Co., Limited www.olightworld.com Tel: +86-755-3351 8606 Fax: +86-755-3380 0207 Email: service@olightworld.com

www.DrMemory.com/Olight