# USA Customer Support

cs@olightstore.com

#### Global Customer Support

Customer-service@olightworld.com

Visit www.olightworld.com to see our complete product line of portable illumination tools.



# Olight Technology Co., Limited

5th Floor, Building A2, Fuhai Information Harbor, Fuhai Subdistrict, Bao'an District, Shenzhen, China 518103 Made In China







CE

# OOLIGHT

**USER MANUAL** 



**X9R Marauder** 

#### INSIDE THE BOX

X9R Marauder, DC 16.8V/2A Adapter, Strap, Plug, DC 16.8V/1.5A Car Charger, Anti-Roll Ring, User manual.

#### SPECIFICATIONS

Material: AL6061-T6 aluminum alloy unibody design with MilSpec Type- III hard anodizing, along with blue bezel ring and stainless clamping ring on the switch

#### FEATURES

- Highest brightness level ever produced by Olight reaching a mar output of 25 000 lumens.
- Smart output control to prevent overheating Proximity sensors that drop the output automatically
  when the flashlight head approaches a nearly object. Active thermal management system that
  refuses the orbit of when the temperature gets too het for overheating or overheating.
- Real time battery level display while indicating an 8-level output selection.
- Improved built-in heat dissipation system design for more effective cooling of the flashlight body.
   Frencomic design Milled finger grooves, shoulder stranged concealable stranged for

# SPECIFICATIONS

convenient and comfortable use

	L8	L7	L6	L5	L4	L3	L2	L1
÷Ģ:	25,000 •6.400 Lumens	12,800 •6,400 Lumens	6.400 LUMENS	3.200 LUMENS	1.600 Lumens	800 Lumens	400 Lunens	200 Lunens
(	3 + 100 min	10 + 90 min	2h	4h	8h	12h	19h	27h
	630m	450m	315m	215m	160m	115m	85m	60m
<del>-</del>	99.200cd	50.600cd	24.800cd	11.600cd	6.400cd	3.300ed	1.800cd	900cd

All tests above are carried out in accordance with ANSI HEMA FL 1-2009 standards

#### NOTE:

 Before your first use, remove the protective film on the lens. Unscrew the tailcap and take out the battery pack.



2. Take off the insulating film on the positive side of the battery pack



#### WARRANTY

Within 30 days of nurchase: Return to the original seller for renair or replacement

Within 10 years of purchase: Return to Olight for repair or replacement.

Battery Warranty: Olight offers a one year warranty for all rechargeable batteries

This warranty does not cover normal wear and tear, modifications, misuse, disintegrations, negligence, accidents, improper maintenance, or repair by anyone other than an Authorized retailer or Oliothi itself

## EU-DECLARATION OF CONFORMITY



EU-Declaration of Conformity can be found here CE: https://olightworld.com/ec-declaration

Note. The max output can change due to remaining hattery level and filterflight themsensters. When the latter level is in the Filter of above and the temperature of the fishight based is below the threshold value set at 80°C, copart level 18 (25,000 lunears) will be the max extent in battery level in under WES, for when the improprature is shown the finished value. We will time be the max output instead of 1.8 When the Improprature is shown the finished value (i.e. will time with the 1.4.5 set the short for darks). Or maximum control will be 1.5 when the value of the filter of the fi

BATTERY LEVEL									
P5-P8	<=80°C	0	0	0	0	0	0	0	0
P5-P8	>80°C	χ	χ	0	0	0	0	0	0
P1-P4	<=105°C	Χ	χ	0	0	0	0	0	0
P1-P8	>105°C	Х	Х	х	х	0	0	0	0



# DANGER

- Do not throw the light directly into human eyes. This may cause temporary blindness, or permanent damage to the eyes.
- Do not cover the light head when the flashlight is on, or place the flashlight head on the
  ground. The radiation energy of the flashlight may cause damage to the flashlight itself, or
  even result in burning to other materials.
- Please do not cover a flashlight that is on. The generated heat can cause burning or even unpredictable disasters.

3. Screw the tailcan back on tightly after you out back the battery pack



# CHARGING

For ordinal user experience, completely change the battery before your first use. Use to NITA, registrates, seen or old bit in high the battery date of the despite Remove the power adapter from the pockaging, open the change part cover on the fashight need to the switch, and consect from the pockaging, open the change part cover on the fashight need to the switch, and consect the adapter the three parts and the consection of the switch and the parts of the switch, and consect starts changing the LED battery discharges will esgably the manning prover look while the need shows a behind battery discharged the parts grow and all levels are fill unmarked, the flashight is fully changed. Remove the adapter from the changing port and relation the port cover markets such as the section scale of the change port and relation the port cover markets such a fast as either scale that such the same developes about the time and the section of the section of the scale of the section of the section of the section that the same start and the section of the sec

#### NOTE-

- While charging, the LED indicator on the top blinks once per second
- While the battery is 10% of lower, the lowest LED indicator (P1) blinks.
   Max time to reach a full charge: 4 hours (DC Adapter). 7 hours (Car Charger).

### ANTI-ROLL RING INSTALL

Remove the anti-roll roll ring from the packaging and slip it onto the light starting from the tail cap. Place it into the designated area located on the flashlight head.





3



#### (EN ) English

ON/OFF. Prices the exists to turn the light excell. When the light is turned on again, it will return to the previously memorated highlaces level. I.4 miles sell all the marriaded wheth the light is turned of 15.5.6 miles will be maintained for 100 miles to before reventing to mode it. The action made and the sense of the light of the light

DIRECT ACCESS TO LOWEST OUTPUT: When the flashlight is off, press and hold the switch for

DIRECT ACCESS TO TOP OUTPUT: When the flashlight is not locked out, double click the switch quickly to access the highest mode.

STROBE: Quickly triple click for more than three times) the switch to enter strobe mode. Single

click to turn the light of r return to the previously memorized high or influence land. Single click to turn the light of r return to the previously memorized high finisheness level.

LOCK/UNLOCK: When the flashlight is eff pages and hold the switch for august two seconds to

LOCKUNLOCK When the fileshight is off, poess and hold the switch for ever two seconds to chooses the button following mode the finalish; will earlier LI, the lewest mode first and will then switch of to signal field-unt mode). Under lockout mode, press and hold the switch for less than one second. The LID indicates will burn and to about these seconds to signal that it is still flocked To undock the flashlight, simply press and hold the switch for over one second and release it to return to romat hunticionally.

SHOULDER STRAP: Pull up the shoulder strap hole attachment on the flashlight head above the switch and attach one side of the strap to it. Attach the other end to the metal ring at the other end of the flashlight.

WARNING: Do Not Keep Near Flammable Objects!

Please Bo Not Charge And Use At The Same Time