


OUTPUT VS RUNTIME

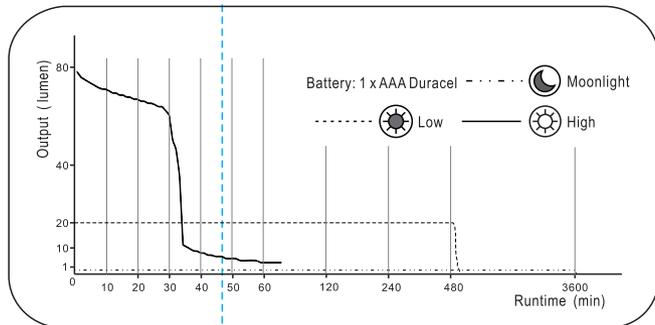

SPECIFICATIONS

OUTPUT & RUNTIME	
HIGH	80 LUMENS / 35 MIN
LOW	20 LUMENS / 8 HRS
MOONLIGHT	0.5 LUMEN / 60 HRS
STROBE	80 LUMENS (10HZ) / 1 HOUR
LED	CREE XP-G2 LED
VOLTAGE	0.9V-1.5V
CANDELLA	360 CD
BEAM DISTANCE	38 METERS/ 111 FEET
BATTERY TYPE	1 x AAA ALKALINE or NIMH
BODY TYPE	TYPE-III HARD ANODIZED ALUMINUM(BLACK)
WATERPROOF	IPX8 (UP TO 2 METERS)
IMPACT RESISTANCE	1.2 METERS
DIMENSIONS	L 70mm x D 14mm / 2.75 in x 0.55 in
WEIGHT without battery	11g / 0.38 oz

Note: Tests performed with 1x AAA alkaline 1.2V battery

All performance claims to ANSI/NEMA FL1-2009 Standard.



BATTERY AND SAFETY WARNINGS

- Do not use unsupported batteries with this flashlight.
- Use caution on high outputs or long runtimes as flashlight may get hot.

WARRANTY

Within 30 days of purchase: Return to retailer from which you purchased for repair or replacement.

Within 5 years of purchase: Return to Olight for repair or replacement.

This warranty does not cover normal wear and tear, modifications, misuse, disintegrations, negligence, accidents, improper maintenance, or repair by anyone other than an Authorized retailer or Olight itself.

Technical Support Inquiries
techsupport@olightworld.us

Customer Service
service@olightworld.com

Visit www.olightworld.com to see our complete product line of portable illumination tools.



Olight Technology Co., Limited
2/F, Building A, B3 Block, Fuhai Industrial Park, Fuyong, Bao'an District, Shenzhen, China 518103

V2. JUNE 12, 2014

HOW TO OPERATE

ON/OFF: Fully tighten the head to turn flashlight on.

CHANGE BRIGHTNESS LEVEL:

(FIG A) When the light is on, quickly twist the head of the flashlight counter-clockwise then clockwise. With each back and forth twist, the brightness levels will cycle up then repeat moonlight – low – high. Do not over loosen the head.

STROBE: (FIG B) To access strobe, quickly loosen and re-tighten the head through two moonlight – low – high cycles plus moonlight mode. Depending on the last used brightness level, this takes 6-8 twists. All twists must be completed within three seconds.

INSIDE THE BOX: i3S EOS keychain flashlight, AAA battery, and user manual

BATTERY INSTALLATION

Ensure batteries are inserted with the positive (+) end pointing to the head. The i3S will not operate with incorrectly inserted batteries.

SUPPORTED BATTERIES

- 1 x AAA (included)




TWIST TO REMOVE

(FIG A)



SLIGHTLY TWIST HEAD BACK & FORTH

(FIG B)

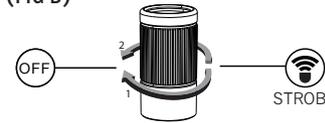

SLIGHTLY TWIST HEAD BACK & FORTH THROUGH 2 CYCLES + MOONLIGHT



i3S EOS KEYCHAIN LED FLASHLIGHT USER MANUAL



Thank you for purchasing the Olight i3S EOS flashlight! Please read this manual carefully before using this product.

www.DrMemory.com/Olight